FS90 Simple V10 Basic Wiring Examples. Use correct connections for each individual system.

STP = terminals = N/O Relay contact (**1A MAX**) CC terminals = N/O Relay contact (**1A MAX**)

All other connections are 24VDC referenced to 24vdc- terminal on FS90 Board

















